

Brushless 34° Framing Nailer


PULSA 110S



DCFN110-3490 DCFN110-3490M

OPERATOR'S MANUAL

20V Rechargeable Brushless 34° Framing Nailer

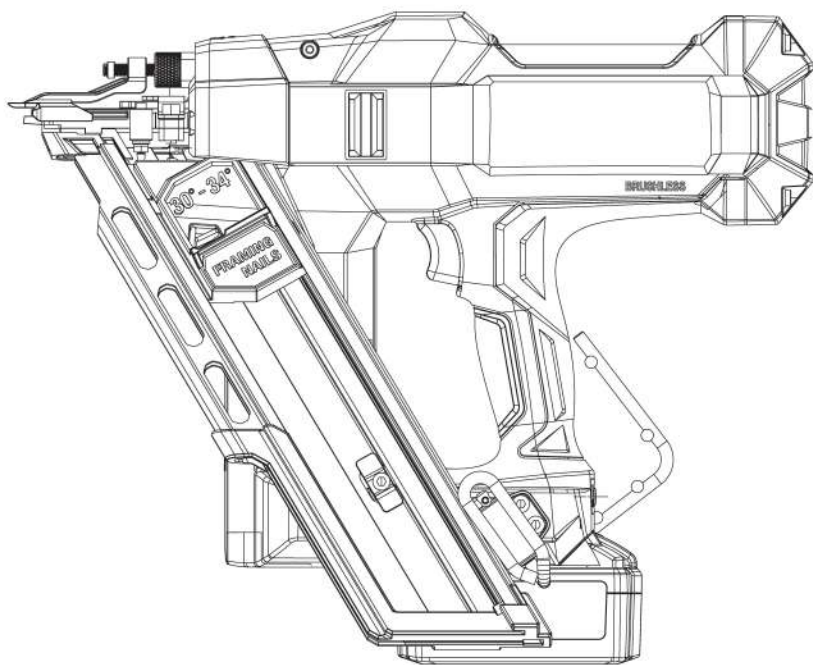

WARNING !To reduce the risk of injury, user must read and understand operator's manual

It is not allowed to point the nailer at oneself or others at any time to avoid accidental nail shooting and personal injury

When the nailer malfunctions, the battery pack must be removed and all nails must be removed before maintenance can be carried out.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.

Water entering a power tool will increase the risk of electric shock.

- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of an GFCI reduces the risk of electric shock.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear

eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

POWER TOOL USE AND CARE

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/ or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

GENERAL POWER TOOL SAFETY WARNINGS

- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

BATTERY TOOL USE AND CARE

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 265°F (130°C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

SERVICE

SERVICE

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

FRAMING NAILER SAFETY WARNINGS

- Always assume that the tool contains fasteners.

Careless handling of the nailer can result in unexpected fringing of fasteners and personal injury.

- Do not point the tool towards yourself or anyone nearby. Unexpected triggering will discharge the fastener causing an injury.
- Do not actuate the tool unless the tool is placed firmly against the workpiece. If the tool is not in contact with the workpiece, the fastener may be deflected away from your target.
- Disconnect the tool from the power source when the fastener jams in the tool. While removing a jammed fastener, the nailer may be accidentally activated if it is plugged in.
- Use caution while removing a jammed fastener. The mechanism may be under compression and the fastener may be forcefully discharged while attempting to free a jammed condition.
- Do not use this nailer for fastening electrical cables. It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazards.

• Prior to each use, check workpiece contact and trigger for correct operation. Do not disassemble or clamp parts of the workpiece contact, trigger, or driving mechanism. This will cause unexpected actuation, resulting in serious injury.

• Do not engage in horseplay. The discharged fasteners are projectiles capable of causing serious injury.

• Do not remove, tamper with, or otherwise cause the tool operating controls to become inoperable. This will cause unexpected actuation, resulting in serious injury.

• Do not operate a tool if any portion of the tool operating controls is inoperable, disconnected, altered, or not working properly. This will cause unexpected actuation, resulting in serious injury.

• Always keep hands and body away from discharge area of the tool. Never attempt to clear a jammed workpiece contact by grasping the discharge area of the tool. Fasteners discharged from tool can cause serious injury if they contact hands or body.

• Do not drive fasteners close to the edge of the workpiece. Fasteners can slip off corners and edges or penetrate through thin material, making them projectiles capable of causing serious injury.

• Use the tool only for the intended purpose. Do not abuse the tool. Do not use as a hammer, stamp or engrave information onto parts, drop or impact the tool or otherwise apply excess force to the tool in use. Do not mount the tool to stands or modify it for stationary use

• Always use common sense and be cautious when using tools. It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use this tool if you do not understand these operating instructions or you feel the work is beyond your capability; contact a trained professional for additional information or training.

• Maintain labels and nameplates. These carry

important information. If unreadable or missing, contact a Naitask service facility for a free replacement.

• WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paint
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SYMBOLGY



Volts



Read Operator's Manual



Direct Current



Wear Eye Protection



Single Sequential Actuation



Wear Earplugs



Multiple Actuations



Keep Hands Away

SPECIFICATIONS

Volts.....	20 DC
Battery.....	LB2025/LB2050
Charger Type.....	LC2020SMP
Recommended Ambient	
Operating Temperature.....	0°F to 125° F
Fastener Length.....	50-90mm
Fastener Size(Diameter).....	2.8-3.3mm
Magazine Capacity.....	53nails

FUNCTIONAL DESCRIPTION

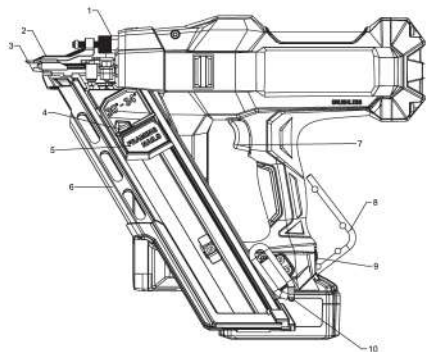


Figure 1

 


Figure 2

- | | |
|--|-------------------------------|
| 1---Depth adjustment | 2---Workpiece contact bracket |
| 3---Striker | 4---Nail pusher plate |
| 5---Nail pusher assy | 6---Magazine |
| 7---Trigger | 8---Hook |
| 9---Power/Actuation | 10---Belt hook |
| 11---Power/Mode | 12---Single actuation LED |
| 13---Multiple actuations/Low battery LED | |

Power/Actuation Selection

1. Install battery pack
2. Press and hold 11 to turn on the tool. The green LED ring will light and the 12 Single actuation LED will light.
3. Press 11 to toggle between Single actuation and Multiple actuation
4. The 13 Low battery LED flashing when the battery level does not have sufficient charge to operate the tool.

OPERATION

Install or uninstall the battery pack

Note: when installing or uninstalling the battery pack, do not press the trigger and press the nose piece, so as not to trigger the switch by mistake. The battery pack is only partially charged upon delivery and must be fully charged in the Charger before first use to ensure maximum battery power.

1. Install the battery pack, as shown in Figure 3 below. When inserting the battery pack, insert the battery pack into the case correctly. Be sure to insert it all the way to the bottom until you hear a clicking sound, indicates that the battery pack is securely attached to the machine. Otherwise the battery pack will accidentally fall off the case, causing injury to the operator or others. Avoid inserting the battery pack too hard or using other objects to knock it in. * note: only batteries of the specified model can be used. Use of battery packs from other brands carries the risk of injury and personal injury and property damage due to the explosion of the battery packs.

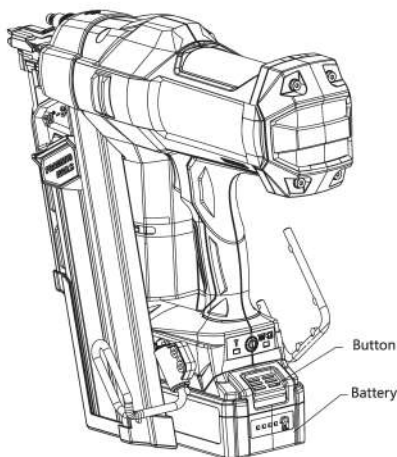


Figure 3

2. remove the battery pack the battery pack is under the handle of the machine, press the pack button in the direction of the arrow, and then press the arrow in Figure 4 to pull the pack out. * Note: Do not force the pack out.

OPERATION

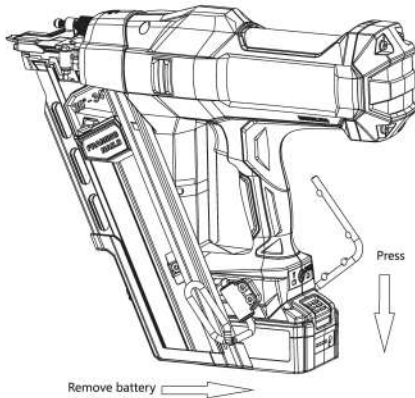


Figure 4

*Power indicator when the power button is pressed, the power indicator will display the battery pack's power level. The power level can be indicated by the status of the four green LED lights.

Green light status	The remaining power
4pcs green lights	75%-100%
3pcs green lights	50%-75%
2pcs green lights	25%-50%
1pc green lights	10%-25%

Table 1

*Continue to use

Allow the machine to cool for 15 minutes before replacing the battery pack and continuing to use the machine until the battery runs out.

*Over-discharge protection

The machine is equipped with over-discharge protection circuit, when the battery power is insufficient, the protection circuit is opened, the host power orange lamp flashing tips to charge, the machine stopped rotating.

* Disposal of waste battery packs

To protect natural resources, recycle or dispose of battery packs properly. The battery contains a lithium battery. Please consult your local authorities for information on recycling and/or disposal. Remove the battery pack after the battery pack runs out of power and wrap the pole port in strong tape to avoid short circuit and leakage. It is absolutely forbidden to try to open or remove any parts.

Installing nails

1. Insert the paper strip nails from the bottom of the magazine

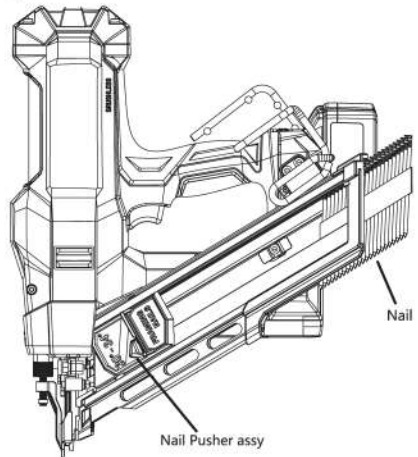


Figure 5

2. Pull back the Nail Pusher Assy and against the nail.

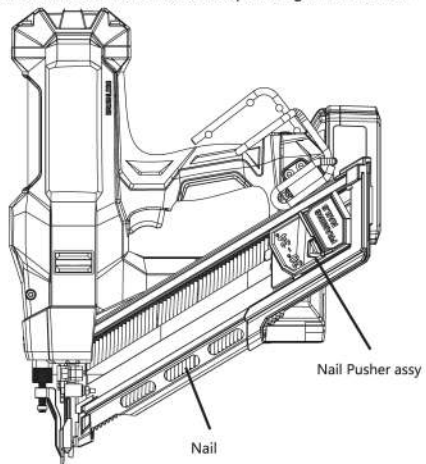


Figure 6

*Note:

1. Do not press the trigger, do not press the contact head, keep the nailer pointed down.

OPERATION

Remove nails

- 1.Remove the battery pack first.
- 2.Pull the Nail pusher assy and place it in the position shown in the following picture.
- 3.The nails can the slide out of the magazine .

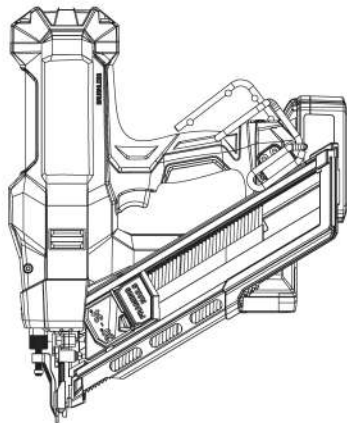


Figure7

Nailing operation

Operators and others in the work area must wear protective goggles. It is not allowed to point the nailer at oneself or others at any time to avoid accidental nail shooting and personal injury. It is prohibited to use this machine without any nose piece installed.

1. Install the nails and battery pack according to the previous instructions.
2. Keep the nailer head down and press the power button. When the nailing light and the circular power light are on, it indicates that the nailing is ready.



Figure8

3. Place the nailer head against the work piece, press down the nailer, and pull the trigger. Complete the nailing operation. Only pull the trigger, and the machine does not drive nails.

INSPECTION AND MAINTENANCE

Inspection

The safekeeping personnel must conduct a daily inspection when the machine is sent out or retrieved; Before use, users must undergo daily inspections; The unit using the machine must have dedicated personnel to conduct regular inspections; Check at least once a year; In areas with humid heat and frequent temperature changes, the inspection cycle should also be shortened in areas with poor usage conditions; Timely inspection should be conducted before the rainy season.

Machines that have passed regular inspections should be labeled with a "qualified" inspection label on appropriate parts of the machine. The "qualified" identification should be clear, clear, correct, and at least include: machine number, inspection unit name or identification, inspection personnel name or identification, and effective date.

Maintenance

When repairing power tools, replacing tools on power tools, or handling power tools, be sure to remove the battery and remove the nails.

The maintenance of the machine must be carried out by a maintenance unit recognized by the original production unit. The user unit and maintenance department shall not arbitrarily modify the original design reference of the machine, and shall not use substitute materials with lower performance than the original materials or parts that do not conform to the original specifications.

MAINTENANCE

Storage

When the tool is not needed for a long time, please remove the battery pack. Store the battery pack away from metal objects such as paper clips, coins, keys, nails, screws, or other small metal objects. These objects may connect the two terminals of the battery together. Short circuiting battery terminals may cause explosions or fires

Clean the air vent

The ventilation openings of the tool must be kept clean. It should be cleaned regularly or at any time when blockage occurs.

Check the installation of screw

Frequently check whether the installation screw are tight and secure. If loose screws are found, they should be immediately retightened to avoid accidents.

Cleaning of upper and lower receiver

Regularly check whether the upper and lower receiver have accumulated dust and debris. If found, it should be cleaned immediately to avoid affecting normal nailing.

Magazine inspection

The magazine should be regularly checked for debris or concrete ash residue, and if there are any debris, it should be cleaned immediately. At the same time, check whether the row of nails slides smoothly in the nail groove. If not, there may be obstacles when the nails are ejected.

Clean

It is prohibited to use liquids such as water or chemical cleaning agents to clean the machine. Wipe it clean with a dry cloth. Keep the handle dry and clean to avoid oil and grease contamination.

Warning Label

If the warning label falls off or is damaged, a new one must be affixed. The new warning label can be obtained by authorizing the service center

SPECIFICATION AND PURPOSE

Model	DCFN1110-3490 DCFN1110-3490M
Voltage	20V
Energy	110J
Nail type	the paper strip nails
Nail length	50-90mm
Nail diameter	2.8-3.3mm
Nail capacity	53nails
Nailing frequency	2nails/s
Battery	20V 5.0Ah Li-ion 20V 2.5Ah Li-ion
Nails per package	900nail/5.0Ah 400nail/2.5Ah
Battery pack charging time	5.0Ah,2.5hrs 2.5Ah,1.2hrs
Dimension	39cmX12cmX32cm
Weight without battery	4.3kg

*Note: Our company reserves the right to improve the specifications and parameters without prior notice.

Table 2

Standard accessory

Protective glasses :1pc;Protective earplugs :1pc;Hexagon wrench :1pc;Hook:1pc;Hook screws:2pcs;

CHARGER SAFETY INSTRUCTIONS

Warning! Read all warnings and instructions! Failure to use or operate according to the instructions listed below will result in electric shock, fire, and/or serious injury.

Workplace

Do not use battery chargers in explosive environments, such as those with explosive liquids, gases, or dust.

Electrical safety

- 1) The charger plug matches the socket. Never modify the plug in any way.
- 2) Do not expose the battery charger to rain, snow, or damp environments.
- 3) Keep the battery charger away from heat, oil, sharp edges, or moving parts.

Usage and precautions for chargers

- 1) Keep the idle battery and charger outside the reach of children and do not let anyone unfamiliar with the battery and charger or unfamiliar with these instructions use this battery charger.
- 2) For safety reasons, it is not recommended for individuals (including children) with disabilities, intellectual disabilities, inexperience, or lack of independent operating ability to use this charger without supervision; Please take good care of children to prevent them from using this charger as a toy.
- 3) When charging, the power supply voltage must be consistent with the voltage specifications indicated on the charger. Ensure that the charger is in a well ventilated and flammable free area. When charging, the charger will become slightly warmer. This is a normal phenomenon. Avoid being left unattended to avoid other hazards
- 4) After charging, please cut off the power first and then remove the battery pack from the charger. Do not leave the battery pack inside the charger for a long time.
- 5) When maintaining or cleaning the charger, be sure to unplug it from the socket, as this practice can reduce the risk of electric shock. Only use a soft dry cloth to wipe this battery charger. Do not use damp cloth, diluent, gasoline, or other volatile solvents for cleaning.
- 6) This battery charger can only charge lithium-ion battery packs of the 20V series model. Using other battery packs or chargers, such as imitations, modified or other brands, poses a risk of injury, as well as personal injury and property damage caused by battery pack explosion and combustion.
- 7) Do not open the battery charger or allow it to be impacted. The storage area of the battery charger must be moisture-proof and mold proof.
- 8) Do not use the charger for other purposes.
- 9) Ensure that there are no foreign objects in the charger slot and avoid dirt or moisture.

10) Do not dispose of battery chargers in general household waste.

11) Do not charge damaged battery packs.

12) Do not charge non rechargeable batteries, as this may cause overheating reactions or even explosions.

13) Do not charge the battery pack when the room temperature is below 10 ° C or above 50 ° C; When the room temperature is below 0 ° C, charging may not be possible.

14) Do not use chargers with damaged power cords or plugs. If the power cord or plug is damaged, it must be replaced by professionals from the manufacturer, its maintenance department, or similar departments. Please use the original factory power cord for replacement.

15) To prevent electric shock, do not touch uninsulated output connections or uninsulated battery terminals

CHARGER OPERATING INSTRUCTIONS

Charging Operation

- 1) After inserting the charger plug into the socket, the green light remains on and enters the charging waiting state.
- 2) Then align the battery pack with the charger according to its polarity and install it, and the charger starts charging.
- 3) When the battery is fully charged, the green light remains on.
In addition, the battery pack is only partially charged upon delivery. Before formal operation, please fully charge the battery pack indoors.
In high temperature environments or after prolonged use, the battery pack may become hot. Please do not charge it immediately. Wait for the battery pack to cool before charging, otherwise it will shorten the service life of the battery pack or cause it to overheat and become unable to charge.

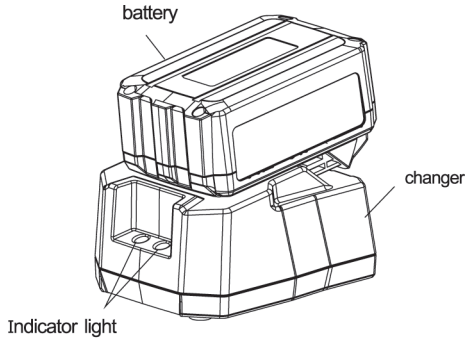


图 16

Attention: Please ensure that the AC voltage parameters meet the voltage requirements on the charger nameplate!

Charger indicator light

The charger can detect certain faults caused by the battery pack and distinguish them by the status of the red and green indicator lights.

When a malfunction occurs, reinsert the battery pack into the charger. If the fault persists, use another battery pack instead. If the new battery pack can charge properly, the original battery pack may be damaged. If the new battery pack still generates the same fault indicator light. The charger may be damaged and needs to be inspected and repaired. The relationship between the status of the indicator light and the charging status is shown in the table below.

Status	Indicator light		Indicator light status description
	Green	Red	
Standby	●	—	Green light always on, red light not on
charging	—	●	Green light is not on, red light is always on
charging completed	●	—	Green light always on, red light not on
Abnormal battery pack	●	●	Flashing green and red alternately
Battery pack temperature below 0 ° C or above 50 ° C	●	—	Green light always on, red light not on

Note: The specific information is based on the charger nameplate.

Table 5

PART LIST

Item	P/N	Description	Remark	Item	P/N	Description	Remark
1	680038001	Spiker		36	300001001	Cam assy	
2	650017001	E ring		37	220001001	Gearbox assy	
3	690050001	Depth adjustment		38	230001001	Motor assy	
4	660002001	M5x14 screw		39	560001001	Rubber pad	
5	630015001	Press plate		40	660004001	M3X10 screw	
6	300043001	WCB asy		41	290001005	Controller assy	
7	660008003	M5x13 screw		42	510003001	Trigger	
8	670007001	Spring		43	670001001	Spring	
9	660001001	M4X16 screw		44	510014001	LED lens	
10	510033001	Front cap		45	510015001	Button board	
11	680004001	Pin		46	510013001	Button cover	
12	670004001	spring		47	560006001	Rubber cover	
13	680005001	Sleeve		48	560028001	Rubber pad	
14	660012001	M3locknut		49	560023001	Rubber pad	
15	680036001	Upper receiver		50	340001001	Housing cover	
16	660015001	M7X20 screw			340002005	Housing support	
17	650001001	Circlip		51	300032001	Hook assy	
18	300044001	Output shaft assy		52	300033001	Belt hook assy	
19	300038001	Frame assy		53	130001001	5.0ah Battery	
20	560004001	Bumper		54	130002001	2.5ah Battery	
21	300029001	Striker assy		55	140001001	Charger	
22	560002001	Rubber pad					
23	690001001	Cylinder					
24	560005001	O ring					
25	300039001	Tank assy					
26	510001001	End cap					
27	660013001	M4X16 screw					
28	680037001	Lower receiver					
29	680008001	M5X10 screw					
30	300020001	Pusher assy					
31	690012001	Pijn					
32	510036001	Bush					
33	670006001	Coil spring					
34	630020001	Washer					

